

safety

- **Your kettle has a dual voltage selector ⑧ on the underside of the kettle. Always check that you have selected the correct voltage before using the kettle.**

- Avoid contact with steam coming out of the spout area when pouring and out of the lid when refilling.
- Keep small children away from the kettle and never let the cord hang down over the worktop edge - a child could grab it and pull the kettle down.
- Never overfill - boiling water may splash out.
- Never put the kettle, cord or plug in liquid.
- **Always unplug your kettle when not in use.**
- Do not use if there is **any** damage to the kettle, cord or plug. Get it checked or repaired: see 'service'.
- **Caution:** Do not operate the kettle on an inclined surface.
- Make sure the lid is secure before switching the kettle on.
- **Warning:** Do not open the lid while the water is boiling.
- Make sure the kettle is switched off before lifting or pouring.
- Unplug the kettle before filling or pouring.
- Never put the kettle near or on cooker hot plates or gas burners.
- This kettle is for boiling water only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your kettle. The JK60 travel kettle is of class 1 construction and should only be used in an EARTHED socket. Any travel plug adapter used MUST provide an earth connection.

Important - UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth,
Blue = Neutral,
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- **Note:**
- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.

- This kettle complies with European Economic Community Directive 89/336/EEC.

before using for the first time

- Remove all packaging and any labels.
- Remove the cups and spoons from the kettle.
- Fill to 'MAX', boil, then pour the water away.
- Wash the cups and spoons and then dry.

key

- ① lid
- ② on/off switch
- ③ neon light
- ④ water level gauge
- ⑤ scale filter
- ⑥ 2 cups
- ⑦ 2 spoons
- ⑧ dual voltage selector
- ⑨ cord clip

to use your travel jug kettle

- 1 Remove the cups and spoons from the kettle.
- 2 Select the required voltage by turning the selector control ⑧.
Always check that you have selected the correct voltage before using the kettle.
- 3 Fill it through the spout or lid. The water level must be between "MAX" and "MIN" (1 cup/approx. 200mls).
- 4 Check the lid is closed.
- 5 Plug in and switch on. The neon will come on.
- 6 Your kettle will boil and switch off automatically. To re-boil, wait a few seconds - the on/off switch needs time to reset.

- **If you experience problems with your kettle switching on and off during use or switching off before boiling, check that the flat element is free from scale - see "descaling".**

- 7 Always unplug the kettle after use.
- Take care when using the cups and do not overfill above the inner rim (approx. 200mls).
- Your kettle is fitted with a scale filter to hold back limescale particles.
- If you find drops of water under your kettle, don't worry - it is just condensation.

boil-dry protection

- If you switch on with too little water, your kettle will cut out automatically. Switch off and let it cool down before re-filling. When it has cooled down, the switch will reset itself.

approximate boiling times

220/240 volts approx 5 minutes
for 450 mls (maximum)
110/120 volts approx 5 minutes 40
seconds for 450 mls (maximum)

care and cleaning

- Before cleaning, unplug your kettle and let it cool down.
- The cups and spoons can be placed in the kettle for compact storage.
- Wrap the cord around the kettle and secure using the cord clip ⑨.
- **the outside**
- Wipe with a damp cloth, then dry. Do not use abrasives - they will scratch the plastic surfaces.
- **the inside**
- Even though your kettle comes with a scale filter, you still need to clean the inside (and the filter) regularly.

the scale filter

- 1 Open the lid.
- 2 Gently lift out the scale filter **1**.
- 3 **either** rinse under the tap or use a soft brush.
or when descaling your kettle, drop the filter in too. Rinse thoroughly.
- 4 To re-fit the scale filter, slide it in until it rests on the notch under the spout **2**.

descaling

- Regular descaling of the flat element will improve the performance of your kettle. If the kettle is not descaled regularly the build up of limescale may result in the following:
 - problems may be experienced with the kettle switching on and off during use or switching off before boiling.
 - the kettle may take longer to boil.
 - the flat element may be damaged.

Please note: not descaling your kettle may invalidate your guarantee.

- When limescale starts to build up on the heating element, buy a suitable descaler and descale your kettle. After descaling, boil with fresh water several times and discard. Clean any descaler off the kettle - it can damage the parts.
- Some regions of the country have chalky water. This makes boiled water look cloudy and leaves a deposit on the side of the kettle. This is normal but can be removed with regular cleaning.
- Alternatively, to reduce limescale build up, use filtered water to fill your kettle.
- A range of Kenwood jug water filters are available.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

UK

If you need help with:

- using your kettle
- servicing or repairs (in or out of guarantee)
- ☎ call Kenwood customer care on **023 9239 2333. Have your model number ready** - it is located on the underside of your kettle.

spares and attachments

- ☎ call 0870 2413653.

other countries

- Contact the shop where you bought your kettle.

guarantee (UK only)

If your kettle goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

children and burns or scalds


advice from the British Burn Association

Every year, 30,000 children go to hospital with burns. What might be a minor burn for an adult could horrifically injure - or even kill - a child. take these precautions

- Keep hot drinks out of children's reach.
- Don't drink while holding your baby. If you're passing someone a drink, make sure a child isn't underneath.
- Keep your kettle, and its cord, well back from the worktop edge so that children can't grab them.
- Keep children away from the kitchen work area.
- For baby's bath, run the cold water first, then add the hot. Mix well and test the temperature with your elbow before you put baby in.
- Teach children about hot things.

run cold water over a burn immediately, then get medical help. Don't stop to remove clothing.

KENWOOD

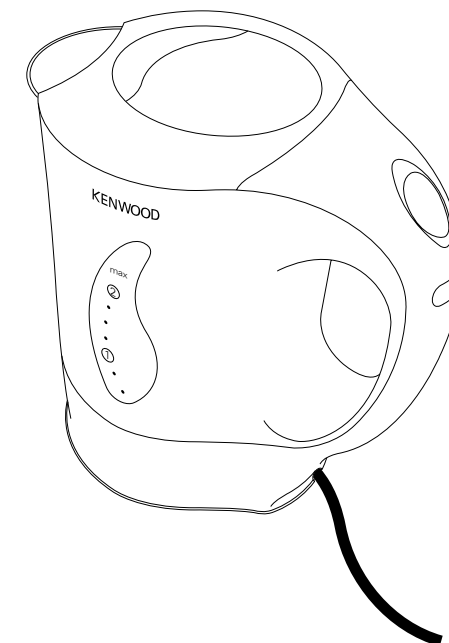

JK60A

